HONDA **INSTALLATION INSTRUCTIONS**	Accessory **CARGO NET P/N 08L96-S82-100**	Application **1999 ACCORD 2-DOOR**	Publications No. **AII 20036** Issue Date **OCT 1998**

PARTS LIST

Cargo net

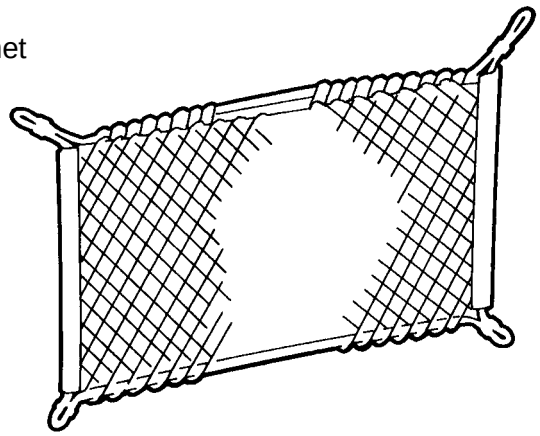

6 Self-tapping hooks

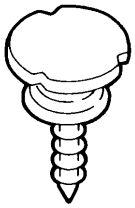

2 Screw hooks

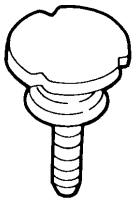

TOOLS REQUIRED

Flat-tip screwdriver

INSTALLATION

NOTE:
In these instructions, the illustrations show the left hooks being installed. The same procedure applies to installing the right hooks.

1. Open the trunk remove the eight clips from the trunk lining (four on the left side, and four on the right side). Save the clips for your customer so they can be reinstalled if the cargo net is removed.

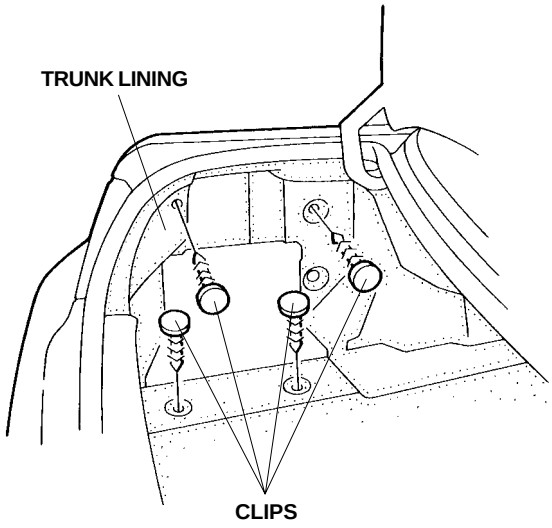

2. Install the six self-tapping hooks and two screw hooks into the clip holes in the trunk lining. Note the screw hook location.

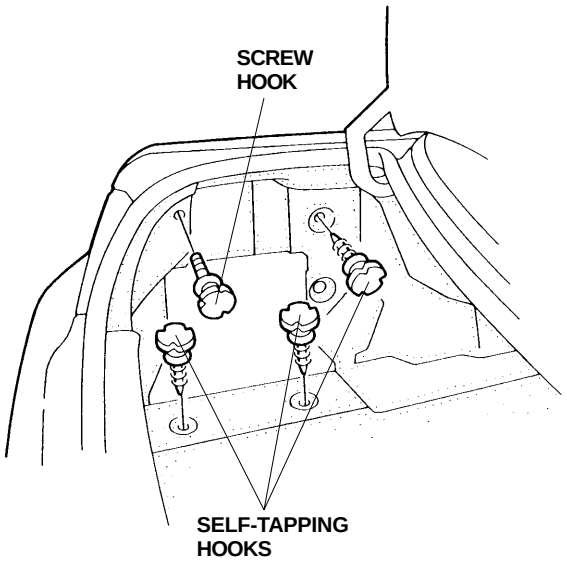

© 1998 American Honda Motor Co., Inc - All Rights Reserved.

3. Attach the cargo net to the hooks according to the illustration that best serves your needs.

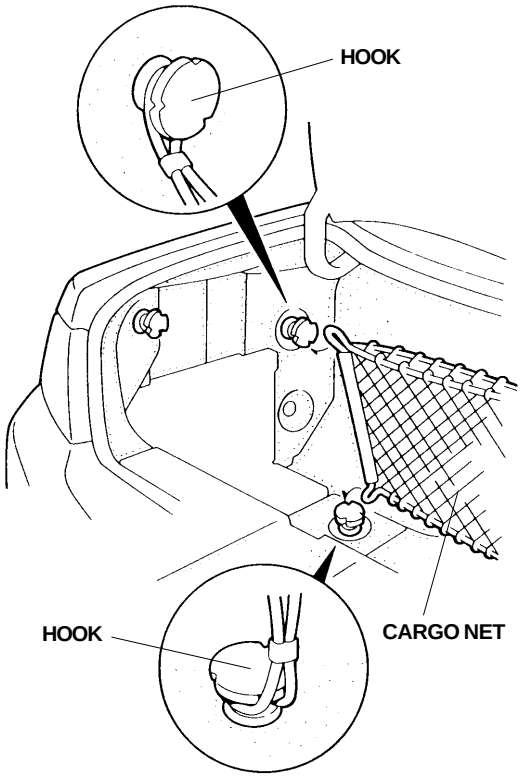

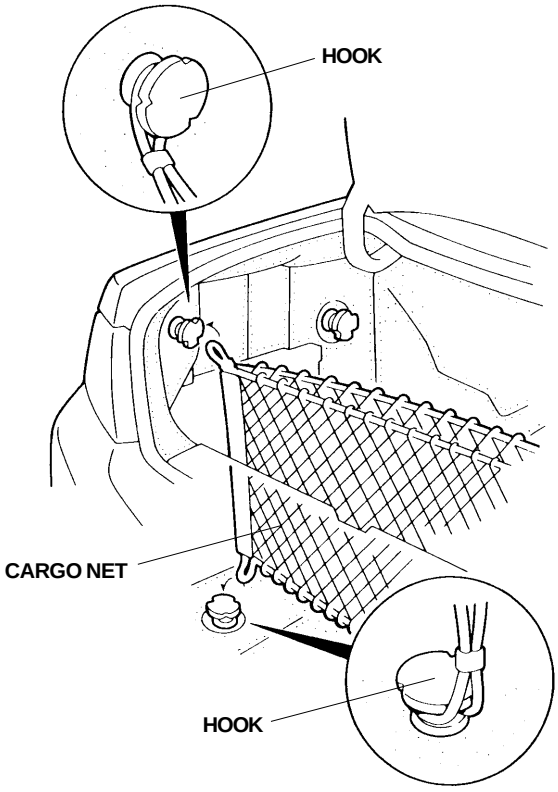

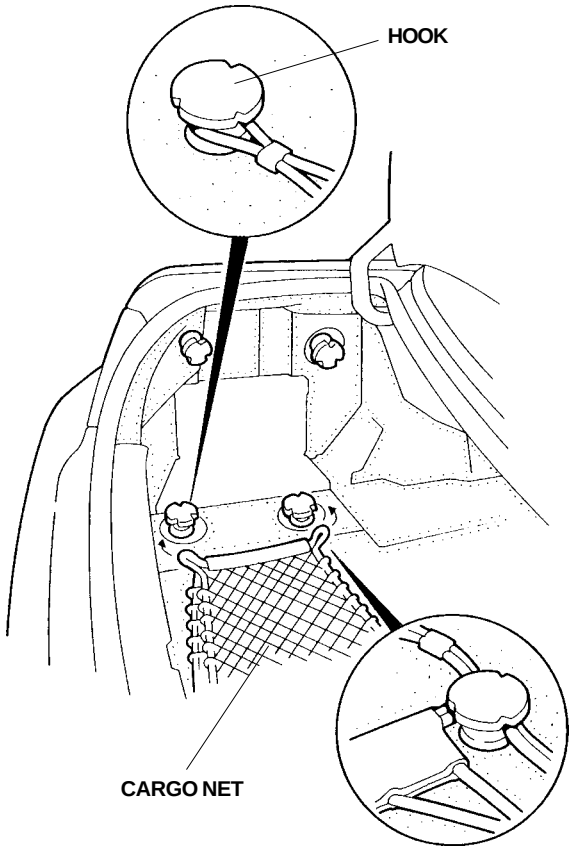

4. Put a copy of these instruct and the clips removed in step 1 in the glove box for your customer.

All 20036 (9810)

© 1998 American Honda Motor Co., Inc - All Rights Reserved.